


REPAIR LIST FOR 8, 10 and 12-ft. WONDER MILL MODEL A

NOTICE: When ordering be sure to state size of mill	No. of Part	8-ft. Letter D	10-ft. Letter J	12-ft. Letter S
Main Casting	1	\$ 8.00	\$12.00	\$18.00
Center Piece in main casting	5	1.70	2.50	3.40
Main Shaft	6	1.80	2.70	3.60
Cap over main shaft bearing No. 28	7	.60	.90	1.20
Hub of windwheel	8	1.50	2.40	3.20
Flange on No. 8 for brake band, in 1 piece	9	.80	1.20	1.60
Shifting Shoe, left	10	.40	.60	.80
Shifting Shoe, right	11	.40	.60	.80
Swivel Casting over Nos. 10 and 11	12	.50	.70	1.00
Pitmans, each	13	1.40	2.10	2.80
Tower Cap, 4-post	14	1.40	2.10	2.80
Tower Step, 4-post	15	1.40	2.10	2.80
Wood rod Coupling	20	.50	.70	1.00
Upper Casting for No. 30	21	.30	.40	.60
Vane Support on No. 1	22	.60	.90	1.20
Main Gears, each	23	1.80	2.70	3.60
Double Pinion	24	1.40	2.10	2.80
Nose Piece	27	.90	1.30	1.80
Bearing for main shaft, front	28	.50	.70	1.00
Bearing for main shaft, rear	29	.60	.90	1.20
Plunger rod	30	.80	.90	1.20
Stop to hold No. 1 from raising	31	.30	.40	.60
Ball Plate, lower, Box Metal	34	.90	1.30	1.80
Ball Plate, upper, Box Metal	35	.60	.90	1.20
Cover over ball bearing	36	.60	.90	1.20
Balls for turn table, tempered steel, each10	.10	.10
Tower Cap, 3-post	40	1.40	2.10	2.80
Tower Step, 3-post	41	1.40	2.10	2.80
Larger part of No. 44	42	.60	.90	1.20
Smaller part of No. 44	43	.50	.70	1.00
Flange on No. 8 for brake band, in 2 parts	44	1.10	1.60	2.20
Swivel Coupling between Nos. 30 and 20	45	.30	.40	.60
Governing weight Bar	46	1.40	2.10	2.80
Brake Band	47	.40	.60	.80
Covering over gears, front	50	3.00	4.50	6.00
Covering over gears, rear	51	3.30	4.90	6.60
Box over No. 55, upper	52	.60	.90	1.20
Box over No. 55, lower	53	.70	1.00	1.40
Cap over Nos. 50 and 51	54	.50	.70	1.00
Rocker Arm	55	1.30	1.90	2.60
Casting which attaches Nos. 46 to 55	56	.30	.40	.60
Guide for No. 65	57	.30	.40	.60
Shifting Rod, connecting with No. 55	59	.40	.60	.80
Wood Blocks which guide No. 30, each	61	.30	.40	.60
Guide Rods over which wood blocks work, each	62	.30	.40	.60
Washers on Main gear hubs, each	63	.20	.20	.40
Tower step for 10 and 12-ft. long stroke mills	64		2.10	2.80
Angle Iron Guide Rod connecting with No. 12	65	.40	.60	.80
Brake and Buffer Spring, each	66	.20	.30	.40
Pump Coupling	88	.30	.40	.60
Main shaft complete with Nos. 27, 8, 9, 24		6.00	9.00	12.00
Plunger rod complete with Nos. 21, 45 and 20		1.50	2.30	3.00
One corner of steel top		2.00	3.00	4.00
Steel Top complete with Nos. 14 and 15		9.00	13.50	18.00
Main Casting complete with all working parts		23.00	34.50	46.00
Main Casting complete with 5-foot stub tower as shipped with mill		30.00	45.00	60.00
VANE FRAME PARTS				
Vane frame (Angle steel)		3.00	4.50	6.00
Rudder (Sheet steel)		3.00	4.50	6.00
Buffer spring rod with spring50	.70	1.00
Swivel Casting on Vane Frame	25	.20	.30	.40
Swivel Casting on No. 46	26	.20	.30	.40
Swivel Casting between Nos. 25 and 26, each	58	.30	.40	.60
Vane Frame complete as shipped with mill		8.00	12.00	16.00
WINDWHEEL PARTS				
Arms, each		1.40	2.10	2.80
Blades, clips attached, each80	1.20	1.60
1 Section complete, 3 blades		3.50	5.30	7.00
Windwheel complete as given above		25.00	35.00	48.00
Windwheel complete as shipped with mill		28.00	40.00	54.00

REPAIR PARTS—Elgin Wonder Model A

For Parts List See Page 39

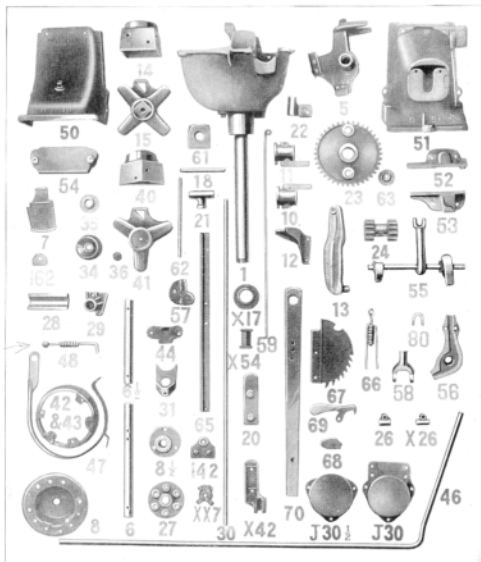

— NOTICE —

Prevent mistakes. Order by letter and number of part desired. If your Elgin windmill has parts with letters not shown in this catalogue, describe the mill and tell us the letter and we will send correct list covering parts.